

## 18. BILGE WATER SYSTEM

The bilge strainer is located under the saloon central seats. Lifting the floor plate under the seats will allow you access to the bilge pump.

To check the bilge pump operation press the bilge switch on the electrical panel. You will hear the pump performance in the case of the present of water in the bilge check the outflow.

**CAUTION:** **Check the bilge pump for bilge water before leaving the dock, during sailing and when leaving the boat for a longer period.**  
**Switch on the bilge water pump switches on the control panel and check the operation of the bilge pump.**



Manual bilge pump on starboard skipper helm seats.

