


29.BOW THRUSTER

Fuse and switch of bowthruster located in space under the bed of bow cabin.

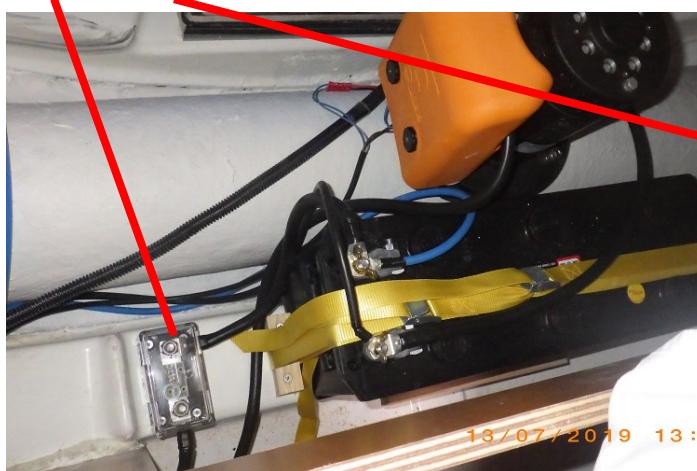

Remote control of bowthruster Quick
(maximum time of continuous operation 5 seconds).

