

16. HOT WATER SYSTEM

A separate hot water system leads hot water from the water heater to the users. The hot water system is filled with fresh water from the fresh water system. When the empty hot water system is being filled, open the hot water seacocks at the taps to let air out of the system.

With Fresh water is heated in two ways:

- the coolant water from the engine when the engine is in operation. The coolant water runs through the water heater where it is used to heat the fresh water filled from the fresh water system.
- With an electrical spiral that can be turned on when the boat is connected to a 230V supply.

CAUTION: **Do not operate the water heater if the fresh water system is empty.**
Do not turn the water heater on if the fresh water system is empty.



Water boiler/heater is located under the wall between aft cabins.