

## 17. HEAD AND WASTE SYSTEM

Sea water is used for flushing the toilets. The toilets are flushed with a manual pump that is built into the toilet. The waste water from the toilets is emptied via outlet seacock.

**CAUTION:** Nothing is to be put down the head included all kind of paper to be kept in plastic bags.  
Prior to use, move the lever to wet bowl to add water - 4/6 pumps.

**Pump out waste in the wet bowl position ; this must be done when you are more than 300 m off shore!**

**After the bowl has been cleared of it's contents, an additional 20 - 25 pulls on 'wet' bowl will flush the bowl and pipes and will keep your heads smelling fresh.**

**Move lever back to dry bowl and pump the bowl and pipes dry, the lever must be left in dry bowl as leaving it in wet bowl will ingress water.**

**Wherever possible please use the marina's WC as this keeps our waters nice and clean.**

**When you stay on anchor or buoy close the WC valve outlet located behinde the door under the sink . 50 l waste tank will concume all from wc.**

Blocked heads will be cleared at a cost to you of eur200.00.

### Each heads equipped with waste tanks

Valve handle to switch between waste tank and sea located behinde this door for aft head



**Valve handle to switch waste tank located under the floor plate between bow heads.**

