

18.HEAD AND WASTE SYSTEM

Sea water is used for flushing the toilets. The toilets are flushed with a manual pump that is built into the toilet. The waste water from the toilets is emptied via waste tank.

CAUTION: Nothing is to be put down into WC included all kind of paper which should be kept in plastic bags.

Prior to use, move the lever to wet bowl to add water - 4/6 pumps.

Pump out waste in the wet bowl position ; this must be done when you are more than 300 m off shore!

After the bowl has been cleared of it's contents, an additional 20 - 25 pulls on 'wet' bowl will flush the bowl and pipes and will keep your heads smelling fresh.

Move lever back to dry bowl and pump the bowl and pipes dry, the lever must be left in dry bowl as leaving it in wet bowl will ingress water.

Wherever possible please use the marina's WC as this keeps our waters nice and clean.


130 l waste tank will consume all from wc.

Blocked heads will be cleared at cost of eur200.00.

Valve must be open during waste pumping out is
Located under the skipper seats



Switch on to release waste tank

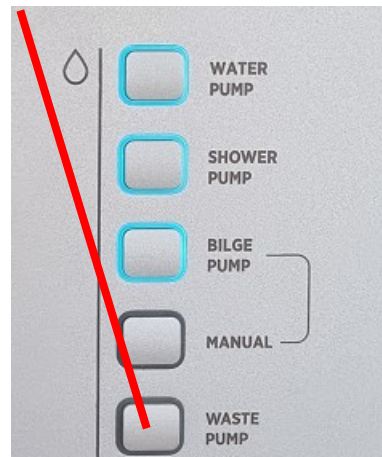

Wast pump is located under saloon table