


16.FRESH WATER SYSTEM

The sailing yacht is equipped with 4 fresh water tanks .They are filled via fresh water fillers marked "WATER".


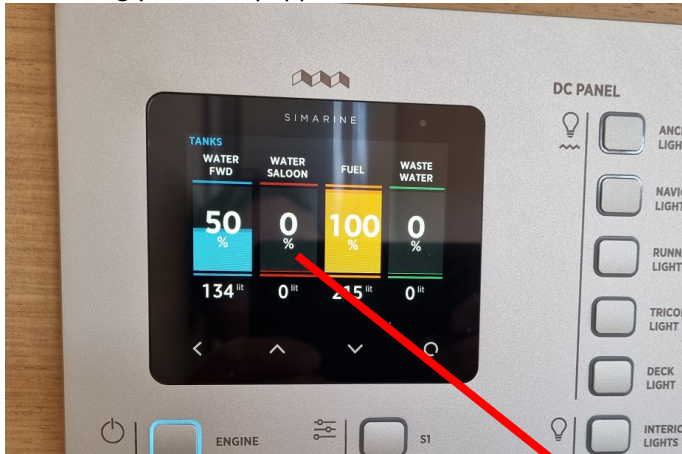


Unscrew the plug using a winch handle. A fresh water level indicator is located on the electrical control panel.

CAUTION: After filling the tanks, close the fillers carefully and screw the tight to avoid the risk of seawater entering the fresh water tanks. To avoid the risk of contaminating one liquid with the other one, never fill fresh water and fuel at the same time.

Electrical fresh water pump and valve are located in saloon port side behind the cushion. The fresh water pump is automatically shut off by a pressure valve when pressure reaches 3.5 bar.

Fresh water pump and valve to switch between salon and FWD fresh water tanks, can be found in saloon port side. See picture below.

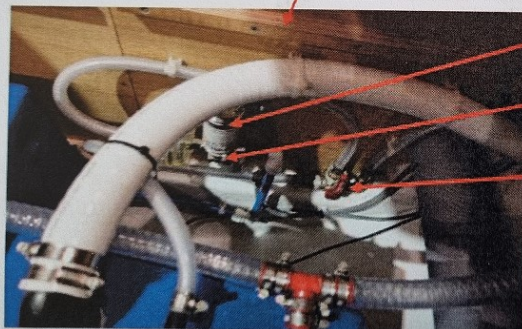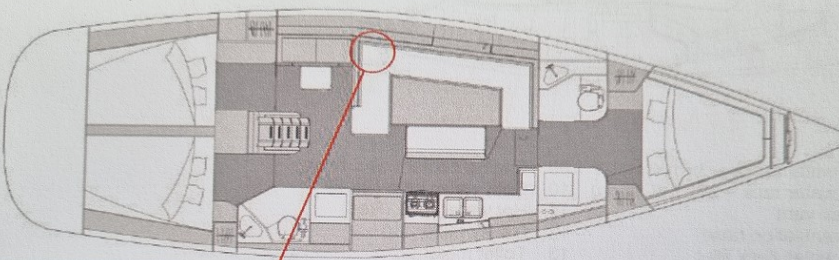


Fresh water electric pump

Pump ventilation valve

Valve to switch between saloon & FWD fresh water tank

Note:
FWD fresh water tank is optional

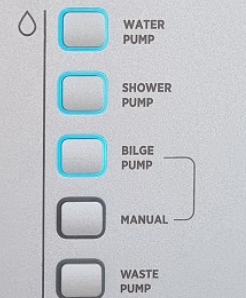

Please ensure that the correct fillers are used, NOT the holding tanks, NOT the diesel tank.

To use the fresh water system, turn on the fresh water breaker on the 12v panel and open a faucet. **When a tank run out of water and almost empty, the pump will run at high speed and the faucet will start to cough air. As soon as you hear the pump running continuously, check to see if anyone is using water. If not, switch off the pump immediately to prevent the pump from drawing more air into the system or the pump overheating.**

Use the water level indication on control panel to confirm if your tank is empty.