


30.BOW THRUSTER

Bowthruster located in space under the bed of bow cabin and spare engine propeler also.



Bowthruster switch

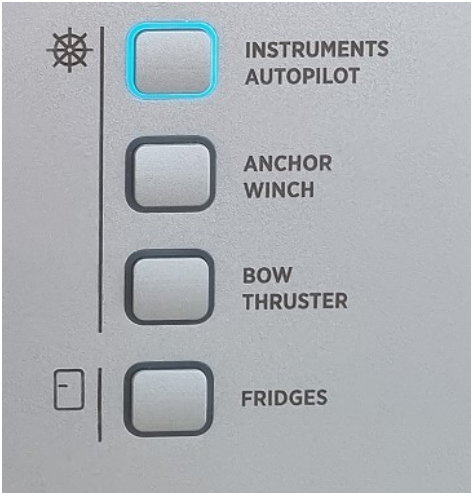

Remote control of bowthruster Quick (maximum time of continuous operation 5 seconds).



Bowthruster fuse

