

17.HEAD AND WASTE SYSTEM

Sea water is used for flushing the toilets. The toilets are flushed with a manual pump that is built into the toilet. The waste water from the toilets is emptied via outlet seacocks.

CAUTION: Nothing is to be put down the head included all kind of paper to be kept in plastic bags.

Prior to use, move the lever to wet bowl to add water - 4/6 pumps.

Pump out waste in the wet bowl position ; this must be done when you are more than 300 m off shore!

After the bowl has been cleared of it's contents, an additional 20 - 25 pulls on 'wet' bowl will flush the bowl and pipes and will keep your heads smelling fresh. Move lever back to dry bowl and pump the bowl and pipes dry, the lever must be left in dry bowl as leaving it in wet bowl will ingress water. Wherever possible please use the marina's WC as this keeps our waters nice and clean. When you stay on anchor or buoy close the WC valve outlet located behind the door under the sink . 50 l waste tank will consume all from wc.

Blocked heads will be cleared at a cost to you of eur200.00.

Head equipped with waste tanks



Valve handle to switch between waste tank and sea located under the sink in each head.



18.BILGE WATER SYSTEM

The bilge strainer is located under the saloon floor. Lifting the floor plate will allow you access to the bilge pump.

To check the bilge pump operation press the bilge switch on the electrical panel. You will hear the pump performance in the case of the present of water in the bilge check the outflow.

CAUTION: Check the bilge pump for bilge water before leaving the dock, during sailing and when leaving the boat for a longer period. Switch on the bilge water pump switches on the control panel and check the operation of the bilge pump.



Bilge pump switch



Manual bilge pump on port side skipper helm seats. Handle for manual bilge pump.

