

21. Showers and sink

Yacht has a hot & cold, fresh-water shower in two heads and cockpit, kitchen and cockpit sink. If the engine has been running, the hot water can be very hot - be cautious! In order to use the showers, the fresh-water pump must be activated on the 12V panel.

Water pump switch



The shower-drain pump is activated automatically.

Shower drain pump under the sink.



Cockpit sink



Transom Shower

The valve and the shower head are located on the port side helm seats.

- By rotary the valve you can regulate the water heating.
- Be careful. The water can be very hot. Test before showering.

To use the shower head simply pull it out and press the button on the back. If no water comes out make sure that the 12V water switch is on, that the shower hose is not kinked (access from aft cabin, same side as shower) and that the water pressure valve is in the correct position.

