

33.Heating

Turn on the heating by pressing the top button on the remote control, after which the fuel pump will make a click every second.

After 5 minutes, the heating will begin to work.



Turn off the heating by pressing the top button on the remote control.