

220v breakers

The 220 volt outlets will operate whilst you are plugged into shore power.


Switch and indicator of 220v shore connection . Inverter , Generator and 0 positions are not in use.

1. Main breaker, leave on at all times

2. Water heating

3. not use

3. Switch of outlets heads

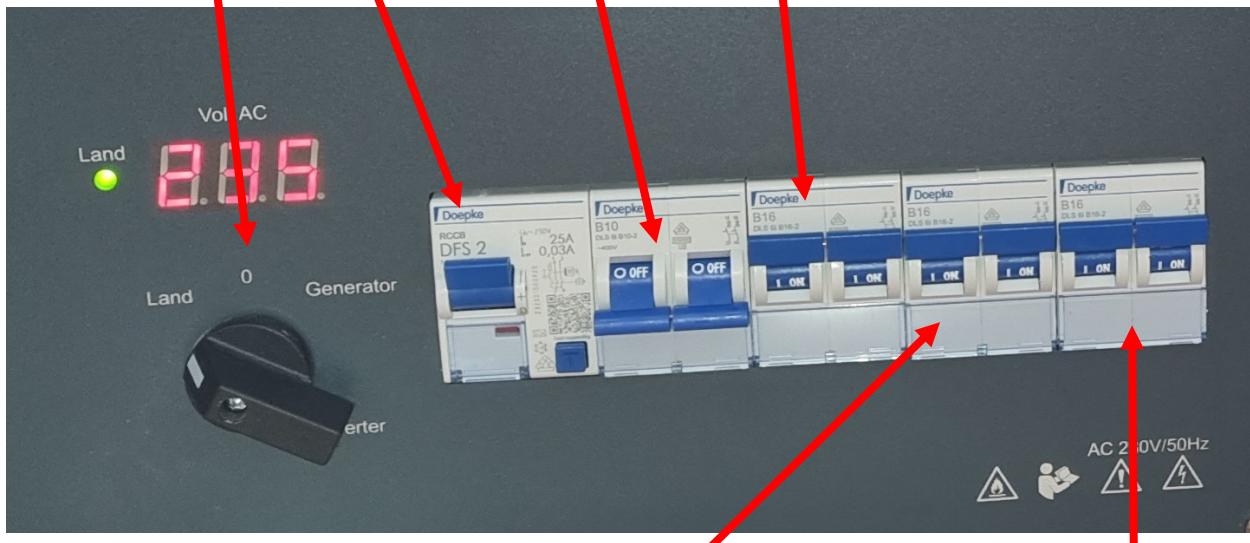

4. Switch of outlet cabins and saloon

5. Charger of batteries

Shore cable switch is located in starboard aft cabin behind the wall where you can come through the inspection hatch.

