

## Battery switches

Engine, service, bowthruster 12v switch is located over the skipper table



Bow thruster battery switch is under the bow cabin bed.

