

4. Daily Engine Checks

- Check the oil level using the yellow dip stick located to the left rear of the engine. The level should be at least halfway between the empty and full marks. To add oil open the oil filler cap on the top of the engine.
- To the rear left of the engine is the seawater filter. Please do not touch this unless instructed to do so.
- To the rear right of the engine is the engine coolant reservoir. The coolant level should be between the maximum and minimum lines.
- Check for any engine leaks or bilge water below engine.
- Check the belt for any damage and correct tension.

KEEP HANDS CLEAR OF ALL MOVING PARTS.

ANY PROBLEMS CALL Technical support.

Sea
water
strainer

Coolant
reservoir
Seawater
coolant
valve
Gear oil
dipstick
Oil filler
Engine
Oil
dipstick

