

21. Risk of damage

! Always keep close the hatch windows shown below to avoid damage of hatches by rope of Jib and boom.



! In reverse gear when the yacht is going astern, with the propeller "walking" the stern to starboard (right side).

! Due to the overload of coastal sea , please book in advance Marinas, Restaurants and buoys berthing for your restful sleep on the yachts:

- <https://my-sea.com/en>
- <https://book.aci-club.hr/>

! Check daily forecast on:
- <http://meteo.hr>
- https://www.windfinder.com/weatherforecast/poljica_trogir
(only 3 days superforecast page)
- <https://www.windy.com/-Wind-gusts-gust>

! Be very carefully with the sheet, mooring line in order to avoid winding on the engine and bowthruster propeller.

Spare engine propeller located under the saloon seat.