

3. Engine start procedures.

- Make sure engine is in neutral.
- Press the on/off; wait to hear "beeps" Then press the start button until you hear the engine running.
- When the engine is running check to make sure you have water coming out of the exhaust.
- To stop the engine press the stop button until the engine has stopped.
- Alarm will sound after you stop the engine. Press the on/off once more to turn off the ignition.
- Button Select to scroll indication of oil level, engine hours, cool temperature, RPM



Should you hear an engine alarm during operation, check the screen to identify the reason for the alarm (over heating/oil pressure/battery) immediately shut down the engine-CALL Technical support.

All our yacht engines run with diesel fuel. There is a diesel filler cap at the stbd helm which is clearly marked "DIESEL".... DO NOT PUT WATER IN . Fuel level instrument shows the diesel level of the tank with a large deviation and helps you to be informed when tank will be empty, and not to indicate the exact diesel level of full tank. Average fuel consumption 5 liters per hour.

MAXIMUM WORKING SPEED OF ENGINE ARE 2200 RPM