

220v breakers


The 220 volt outlets will operate whilst you are plugged into shore power.

Switch and indicator of 220v shore connection . Inverter , Generator and 0 positions are not in use.

1.Main breaker, leave on at all times

2. Water heating

3. Switch of outlets heads

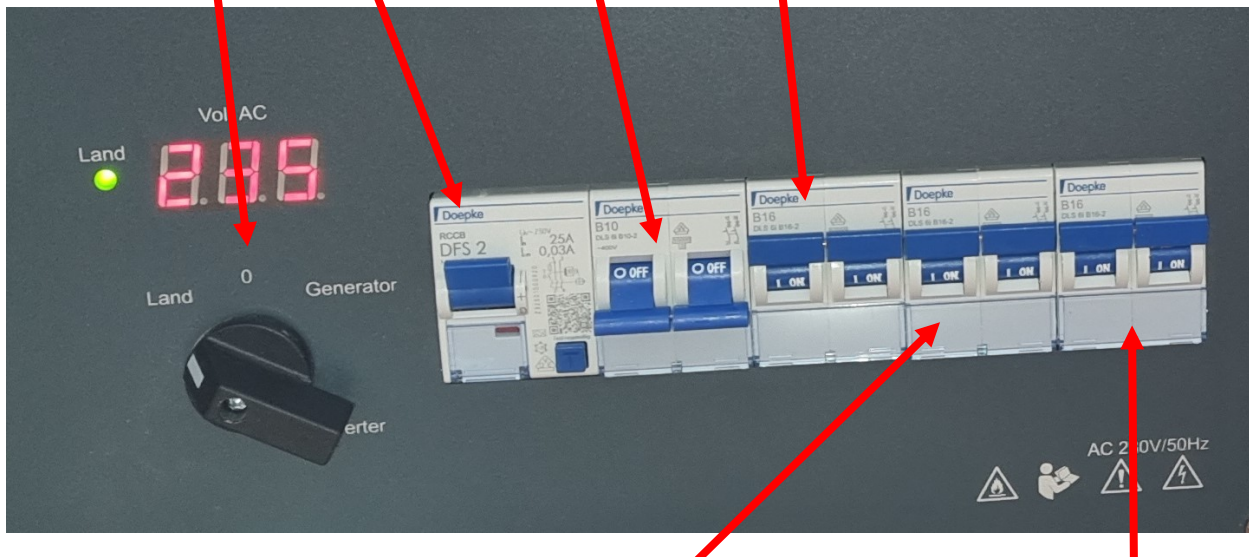

4. Switch of outlet cabins and saloon

5. Charger of batteries

Shore cable switch is located under the floor hatch in cocpit.



Switches located behind the door over the 12v control panel.

