

21. Showers


Your yacht has a hot & cold, fresh-water shower in head and on the transom.

If the engine has been running, the hot water can be very hot - be cautious!

In order to use the showers, the fresh-water pump must be activated on the 12V panel.

Water pump switch

Automatic shower pumps

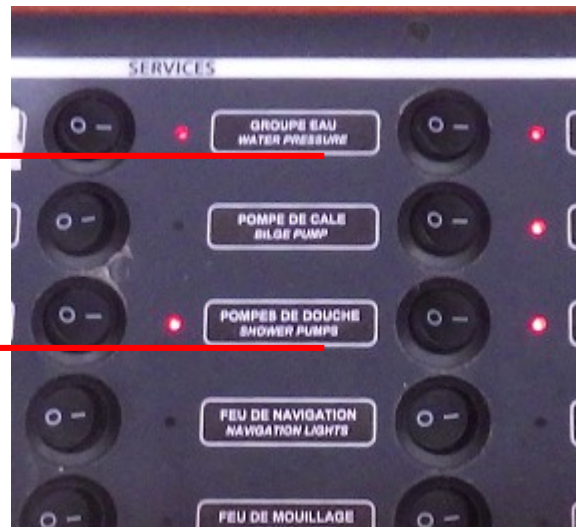

The shower-drain pump is operates automatically when the water run out.

Transom Shower

The valve and the shower head are located on starboard cocpit has two functions:

- By pushing the valve up or down you can turn the water on or off.
- By turning the knob clockwise and counter clockwise you can adjust the temperature of the water. Be careful. The water can be very hot. Test before showering.

To use the shower head simply pull it out and press the button on the back. If no water comes out make sure that the 12V water switch is on, that the shower hose is not kinked (access from aft cabin, same side as shower) and that the water pressure valve is in the correct position.



The valve and the shower head