

29.BOW THRUSTER

Fuse of bowthruster located in space under the bed of bow cabin and spare engine propeler also.



Bowthruster switch

