

21.BOW THRUSTER

Fuse of bowthruster located in space under the bed of bow cabin.



Bow thruster switch in bow cabin



Bow thruster with battery



Remote control of bow thruster (max switching time without pause 5sec)

