

4. Daily Engine Checks

- Check the oil level using the dip stick located to the left rear of the engine. The level should be at least halfway between the empty and full marks. To add oil open the oil filler cap on the top of the engine.
- To the rear right of the engine is the seawater filter. Please do not touch this unless instructed to do so.
- To the rear right of the engine is the engine coolant reservoir. The coolant level should be between the maximum and minimum lines.
- Check for any engine leaks or bilge water below engine.

KEEP HANDS CLEAR OF ALL MOVING PARTS.

ANY PROBLEMS CALL Technical support.

