

19. Heating

Turn on the heating by pressing the middle button on the remote control, after which the fuel pump will make a click every second.
After 5 minutes, the heating will begin to work.




Turn off the heating by pressing the top button on the remote control.
Heater consumes an additional 1-2 liter of fuel per hour.

20. WIFI Internet

Mobile access point is located behind the 12v control panel door in saloon must always be included in electricity for internet access.

Use the net name and passport specified in boat documents.

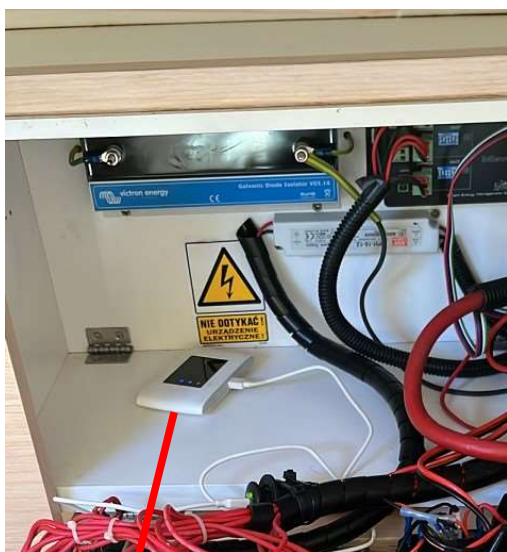

WIFI point