

13. Showers

Your yacht has a hot & cold, fresh-water shower in each head and on the transom.

If the engine has been running, the hot water can be very hot - be cautious!

In order to use the showers, the fresh-water pump must be activated on the 12V panel. There is also a shower-drain pump switch on the 12v panel. Switch this on also.

To operate the shower-drain pump, there is a black push button on the sink which you will need to hold in to drain the water.



Transom Shower

The valve below the shower head has two functions:

- By pushing the valve up or down you can turn the water on or off.
- By turning the knob clockwise and counter clockwise you can adjust the temperature of the water. Be careful. The water can be very hot. Test before showering.

To use the shower head simply pull it out and press the button on the back. If no water comes out make sure that the 12V water switch is on, that the shower hose is not kinked (access from starboard helm skipper seats, same side as shower) and that the water pressure valve is in the correct position.



Shower dry pump with filter and two wc seawater inlet.

