

3. Engine start procedures.

- Make sure engine is in neutral.
- Press the on/off; wait to hear 2 "beeps" Then press the start button until you hear the engine running.
- When the engine is running check to make sure you have water coming out of the exhaust.
- To stop the engine press the stop button until the engine has stopped.
- An alarm will sound after you stop the engine. Press the on/off once more to turn off the ignition

Should you hear an engine alarm during operation, check the tachometer to identify the reason for the alarm (over heating/oil pressure/battery) immediately shut down the engine-CALL Technical support.

All our yacht engines run with diesel fuel. There is a diesel filler cap at the starboard aft skipper seats which is clearly marked "DIESEL".... DO NOT PUT WATER IN HERE.



Start button

Stop button

Heat candle not in use

On/off button