

11. Fresh water system

Yacht has a water capacity of 400 l shared between 4 interconnected tanks located under the bed in aft starboard, port cabin and bow cabin. Before filling the tank let the water run from the hose for a while before placing the end into the filler that is located on the middle side of portside. **Please ensure that the correct fillers are used, NOT the holding tanks or the diesel fill.**



Water filler

To use the fresh water system, turn on the water pump breaker on the 12v panel and open a faucet. **When a tank runs out of water, the pump will run at high speed and the faucet will start to cough air. As soon as you hear the pump running continuously, check to see if anyone is using water. If not, switch off the pump immediately to prevent the pump from drawing more air into the system or the pump overheating.**

Use the menu key on the 12v panel to confirm if your tank is empty.

Menu Key scrolling between battery voltage and water/wast level.



Fresh water pump switch.

Hot water boiler behind companionway



Fresh water pump located under the sits in port aft cabin