

12. Heads

- Nothing is to be put down the head.
- Prior to use, move the lever to wet bowl to add water - 4/6 pumps.
- Pump out waste in the wet bowl position; this must be done when you are more than 300 m off shore.
- After the bowl has been cleared of it's contents, an additional 20 - 25 pulls on 'wet' bowl will flush the bowl and pipes and will keep your heads smelling fresh.
- Move lever back to dry bowl and pump the bowl and pipes dry, the lever must be left in dry bowl as leaving it in wet bowl will ingress water.
- Wherever possible please use the marina's WC as this keeps our waters nice and clean.
- When you stay on anchor or buoy close the WC valve outlet located behind the door under the sink . 50 l waste tank will consume all from wc.
- Blocked heads will be cleared at a cost to you of eur200.00.



Port side WC valve outlet (waste tank out)



Starboard WC valve outlet (with waste tank)



Valve switch between waste tank and sea water outlet.

